

Current Software Versions

Software	Current Version English	2000	XP	Vista (32bit)	WIN7 (32Bit)	WIN7 (64Bit)	WIN8 (32bit&64bit)
PCS/WIN	2.70	OK	OK	OK	OK (2.60+)	OK (2.70+)	
E Designer	7.52	OK	OK	OK	OK (7.52+)	OK (7.52+)	
FR Configurator	5.11	OK	OK	OK	(4.40.0004+)	(4.81.0008+)	
FR Configurator2	1,03	-	OK	OK	OK	OK	OK
FX Configurator EN	1.40	OK	OK	OK	OK (1.30+)	OK (1.30+)	OK (1.40+)
FX Configurator FP	1.70	OK	OK	OK	OK (1.50+)	OK (1.60+)	OK (1.70+)
GT Works2	2.103	OK	OK	OK	OK (2.103+)	-	-
GT Works3	1.130	OK	OK	OK	OK (1.14+)	OK (1.31+)	OK (1.74+)
GT SoftGOT1000	3.130	OK	OK	OK	OK (3.14+)	OK (3.31+)	OK (3.74+)
GT SoftGOT2000	3.130	OK	OK	OK	OK	OK	OK
GX Configurator AD	2.11	OK	OK	OK	OK (2.11+)	OK (2.11+)	-
GX Configurator AP	1.19	OK	OK	OK	OK (1.19+)	OK (1.19+)	-
GX Configurator AS	1.23	OK	OK	OK	OK (1.23+)	OK (1.23+)	-
GX Configurator CC	1.16	OK	OK				-
GX Configurator CT	1.29	OK	OK	OK	OK (1.29+)	OK (1.29+)	-
GX Configurator DA	2.11	OK	OK	OK	OK (2.11+)	OK (2.11+)	-
GX Configurator DN	1.23	OK	OK	OK	1.24+	1.24+	-
GX Configurator2 DN	1.01	OK	OK	OK	OK (1.01+)	OK (1.01+)	-
GX Configurator DP	7.10	OK	OK	OK	OK (7.05+)	OK (7.08+)	OK (7.10+)
GX Configurator PN	1.03	OK	OK	OK	OK	OK	OK (1.03+)
GX Configurator FL	1.25	OK	OK	OK	OK (1.25+)	OK (1.25+)	-
GX Configurator MB	1.09	OK	OK	OK	OK (1.09+)	OK (1.09+)	-
GX Configurator2 MB	1.01	OK	OK	OK	OK (1.01+)	OK (1.01+)	-
GX Configurator PT	1.25	OK	OK	OK	OK (1.25+)	OK (1.25+)	-
GX Configurator QP	2.35	OK	OK	OK	OK (2.34+)	OK (2.35+)	-
GX Configurator SC	2.21	OK	OK	OK	OK (2.21+)	OK (2.21+)	-
GX Configurator ST	1.08	OK	OK	OK	OK (1.08+)	OK (1.08+)	-
GX Configurator TC	1.24	OK	OK	OK	OK (1.24+)	OK (1.24+)	-
GX Configurator TI	1.28	OK	OK	OK	OK (1.28+)	OK (1.28+)	-
GX Converter	1.22	OK	OK	OK	OK (1.22+)	OK (1.22+)	-
GX Developer	8.98	OK	OK	OK	OK (8.91+)	OK (8.98+)	8.114+
GX Developer FX	8.91	OK	OK	OK	OK (8.91+)	8.98+	
GX IEC Developer	7.04	OK	OK	OK	OK (7.04+)	OK (7.04+)	
GX LogViewer	1.26	OK	OK	OK	OK (1.05+)	1.10+	
GX Simulator	7.25	OK	OK	OK	OK (7.25+)	OK (7.27+)	-
GX Works2	1.501	OK	OK	OK	OK (1.40+)	OK (1.62+)	OK (1.492+)
GX Works2 FX	1.501	OK	OK	OK	OK	OK (1.87+)	OK (1.492+)
Configuration Utility	1.07	OK	OK	OK	OK (1.04+)	OK (1.04+)	
iQ Works	1.74	OK	OK	OK	OK (1.16+)	OK (1.25+)	OK (1.74+)
Management, SCADA, HMI)	3.4				OK	OK	OK
MELFA WORKS	4.1	OK	OK	OK	OK (4.0+)	OK (4.0+)	
MR Configurator	C4	OK	OK	OK	OK (C4+)		-
MR Configurator2	1.41T	OK	OK	OK	OK	OK (1.10+)	OK (1.21+)
MR Configurator - SETUP81E	D1	OK	OK	OK	OK (D1+)		-
SETUP154E	E2	OK	OK	OK			-
SETUP161E	F1	OK	OK	OK	OK (F1+)		
SETUP221E	C3	OK	OK	OK	C4+		-
MSIZE (MOTSZ111E)	C6	OK	OK	OK	OK (C4+)		-
SW3RNC-GSVEPRO-E	R	OK	OK	OK	OK (R+)		
MT Works2	1.111	OK	OK	OK	OK (1.17+)	OK (1.19+)	OK (1.70+)

MT Works2 MQ	1.111	OK	OK	OK	OK (1.17+)	OK (1.19+)	OK (1.70+)
MX CommDTM Hart	2.00	OK	OK	OK			
MX CommDTM Profibus	2.00	OK	OK	OK			
MX Component	4.04	OK	OK	OK	OK (3.14+)	OK (3.15+)	OK (4.04+)
MX Configurator MC	2.00	OK	OK				
Software	2.50	OK	OK				
MX MES Interface	1.05	OK	OK	OK	1.06+	1.08+	1.10+
MX MES Interface IT	1.14	OK	OK	OK	OK (1.07+)		-
MX OPC Server	6.05	OK	OK	OK	OK (6.01+)	OK (6.02+)	OK (6.04+)
MX ProjxStudio	2.00	OK	OK	-	-	-	
MX Sheet	2.00	OK	OK	OK	OK (1.10+)	OK (1.11+)	2.01+
PX Developer	1.28	OK	OK	OK	1.31+	1.31+	1.42+
RT Toolbox2	3.30	OK	OK	OK	OK (1.7+)	OK (2.00+)	OK (2.50+)
Monitoring Tool	1.3.0.0245	OK	OK				-

