

# Current Software Versions

Software	Current Version English	Current Version						
		2000	XP	Vista (32bit)	WIN7 (32Bit)	WIN7 (64Bit)	WIN8 (32bit&64bit)	WIN10 (32bit&64bit)
ALPHA Software AL-PCS/WIN	2.70	OK	OK	OK	OK (2.60+)	OK (2.70+)	-	-
E Designer	7.52	OK	OK	OK	OK (7.52+)	OK (7.52+)	-	-
FR Configurator	5.11	OK	OK	OK	(4.40.0004)	(4.81.0008+)		
FR Configurator2	1.11	-	OK	OK	OK	OK	OK	OK (1.09K+)
FX Configurator EN	1.40	OK	OK	OK	OK (1.30+)	OK (1.30+)	OK (1.40+)	
FX Configurator FP	1.70	OK	OK	OK	OK (1.50+)	OK (1.60+)	OK (1.70+)	
GT Works2	2.107	OK	OK	OK	OK (2.103+)	-	-	-
GT Works3	1.190	OK	OK	OK	OK (1.14+)	OK (1.31+)	OK (1.74+)	OK (1.155+)
GT SoftGOT1000	3.190	OK	OK	OK	OK (3.14+)	OK (3.31+)	OK (3.74+)	OK (3.155+)
GT SoftGOT2000	1.190	OK	OK	OK	OK (1.14+)	OK (1.31+)	OK (1.74+)	OK (1.155+)
GX Configurator AD	2.11	OK	OK	OK	OK (2.11+)	OK (2.11+)	-	-
GX Configurator AP	1.19	OK	OK	OK	OK (1.19+)	OK (1.19+)	-	-
GX Configurator AS	1.23	OK	OK	OK	OK (1.23+)	OK (1.23+)	-	-
GX Configurator CC	1.16	OK	OK				-	-
GX Configurator CT	1.29	OK	OK	OK	OK (1.29+)	OK (1.29+)	-	-
GX Configurator DA	2.11	OK	OK	OK	OK (2.11+)	OK (2.11+)	-	-
GX Configurator DN	1.23	OK	OK	OK	124+	124+	-	-
GX Configurator2 DN	1.01	OK	OK	OK	OK (1.01+)	OK (1.01+)	-	-
GX Configurator DP	7.12	OK	OK	OK	OK (7.05+)	OK (7.08+)	OK (7.10+)	
GX Configurator PN	2.00	OK	OK	OK	OK (1.03+)	OK (1.03+)	OK (1.03+)	
GX Configurator FL	1.25	OK	OK	OK	OK (1.25+)	OK (1.25+)	-	-
GX Configurator MB	1.09	OK	OK	OK	OK (1.09+)	OK (1.09+)	-	-
GX Configurator2 MB	1.01	OK	OK	OK	OK (1.01+)	OK (1.01+)	-	-
GX Configurator PT	1.25	OK	OK	OK	OK (1.25+)	OK (1.25+)	-	-
GX Configurator QP	2.35	OK	OK	OK	OK (2.34+)	OK (2.35+)	-	-
GX Configurator SC	2.21	OK	OK	OK	OK (2.21+)	OK (2.21+)	-	-
GX Configurator ST	1.08	OK	OK	OK	OK (1.08+)	OK (1.08+)	-	-
GX Configurator TC	1.24	OK	OK	OK	OK (1.24+)	OK (1.24+)	-	-
GX Configurator TI	1.28	OK	OK	OK	OK (1.28+)	OK (1.28+)	-	-
GX Converter	1.22	OK	OK	OK	OK (1.22+)	OK (1.22+)	-	-
GX Developer	8.119	OK	OK	OK	OK (8.91+)	OK (8.98+)	OK (8.114+)	-
GX Developer FX	8.91	OK	OK	OK	OK (8.91+)	8.98+		-
GX IEC Developer	7.04	OK	OK	OK	OK (7.04+)	OK (7.04+)	-	-
GX LogView er	1.34	OK	OK	OK	OK (1.05+)	OK (1.10+)	1.32+	1.58+
GX Simulator	7.25	OK	OK	OK	OK (7.25+)	OK (7.27+)	-	-
GX Works2	1.570	OK	OK	OK	OK (1.40+)	OK (1.62+)	OK (1.492+)	1.545+
GX Works3	1.043			OK	OK	OK	OK	OK (1.25+)
GX Works2 FX	1.542	OK	OK	OK	OK	OK (1.87+)	OK (1.492+)	
High Speed Data Logger Configuration Utility	1.07	OK	OK	OK	OK (1.04+)	OK (1.04+)	1.09+	1.58+
iQ Works	2.43	OK	OK	OK	OK (1.16+)	OK (1.28+)	OK (1.62+)	OK (2.22+)
MAPS (Lifecycle Management, SCADA, HMI)	3.4				OK	OK	OK	
MELFA WORKS	4.2	OK	OK	OK	OK (4.0+)	OK (4.0+)		
MR Configurator	C4	OK	OK	OK	OK (C4+)		-	-
MR Configurator2	1.66U	OK	OK	OK	OK	OK (1.10+)	OK (1.20+)	OK (1.52+)
MR Configurator - SETUP81E	D1	OK	OK	OK	OK (D1+)		-	-
MR Configurator - SETUP154E	E2	OK	OK	OK			-	-
MR Configurator - SETUP161E	F1	OK	OK	OK	OK (F1+)			
MR Configurator - SETUP221E	C3	OK	OK	OK	C4+		-	-
MSIZE (MOTSZ111E)	C6	OK	OK	OK	OK (C4+)		-	-
SW3RNC-GSVEPRO-E	R	OK	OK	OK	OK (R+)			
MT Works2	1.140W	OK	OK	OK	OK (1.17+)	OK (1.19+)	OK (1.62+)	1.125+
MT Works2 MQ	1.140W	OK	OK	OK	OK (1.17+)	OK (1.19+)	OK (1.70+)	1.125+
MX CommDTM Hart	2.00	OK	OK	OK				
MX CommDTM Profibus	2.00	OK	OK	OK				
MX Component	4.15	OK	OK	OK	OK (3.14+)	OK (3.15+)	OK (4.04+)	OK (4.12+)
MX Configurator MC	2.00	OK	OK					
MX MAE Alarm Modem Software	2.50	OK	OK					
MX MES Interface	1.06	OK	OK	OK	1.06+	1.08+	1.10+	1.16+
MX MES Interface IT	1.15	OK	OK	OK	OK (1.07+)		-	-
MX OPC Server	6.10	OK	OK	OK	OK (6.01+)	OK (6.02+)	OK (6.04+)	OK (6.10+)
MX ProjStudio	2.00	OK	OK	-	-	-		
MX Sheet	2.11	OK	OK	OK	OK (1.10+)	OK (1.11+)	OK (2.01+)	2.09+
PX Developer	1.28	OK	OK	OK	1.28+	1.31+	1.42+	
RT Toolbox2	3.71	OK	OK	OK	OK (1.7+)	OK (2.00+)	OK (2.50+)	OK (3.60+)
RT Toolbox3	1.10		OK	OK	OK	OK	OK	OK
WS Controller Setting and Monitoring Tool	1.3.0.0245	OK	OK				-	-
MX OPC UA Server Module Configurator	*				OK	OK	OK	OK
MX Component for Android	1.03				OK	OK	OK	OK
MX Component for iOS	1.03				Mac	Mac	Mac	Mac